

1. HW Version check

Power on RF OCTOPUS. In Menu / System / HW Ver locate the version of the RF OCTOPUS.

2. FW upgrade

All necessary files are in folder HW Ver x.y, use Version according to your RF OCTOPUS HW version.

- 1.** Disconnect power supply from RF OCTOPUS
- 2.** Press and hold the SET button of RF OCTOPUS
- 3.** Insert the USB-C cable already connected to your computer
- 4.** Computer will mount new external flash memory unit
- 5.** Release the button
- 6.** Copy latest FW file from HW Ver x.y folder (with *.uf2 extension) to newly mounted external flash memory unit
- 7.** When upgrade is done, LED on RF OCTOPUS will stop flashing, remove the USB-C cable then
- 8.** Unit is ready with upgraded FW